

OpenSprinkler v2.x User Manual

Firmware 2.1.0 (Oct 17, 2014)

Contents

Introduction	2
Hardware Interface	2
Installation	3
Wireless Connection	4
LCD and Button Functions.....	4
Firmware 2.1.0 User Manual	5
1. Overview	5
2. Access the controller.....	5
3. Homepage	5
4. Edit Options.....	6
5. Edit Stations	7
6. Run-Once Program.....	8
7. Current Status, Stop Stations, and Set Rain Delay.....	8
8. Programs	9
8.1 Program Preview	10
8.2 Sequential vs. Parallel Running Modes.....	10
9. Logging	11
Firmware Upgrade	11
Advanced Topics (technical skills required).....	12
1. Installing a microSD Card	12
2. Using the on-board Mini-Relay	12
3. Installing a Radio Frequency (RF) Transmitter.....	12
Frequently Asked Questions (FAQ).....	13
Specifications	15
Links and Resources.....	15




Introduction

OpenSprinkler is an open-source, web-based sprinkler/irrigation controller. It's a drop-in replacement for conventional sprinkler controllers that do not have web connectivity. OpenSprinkler provides the advantages of intuitive user interface, remote access, and smart weather-based watering control. It is ideal for homeowners as well as business owners with applications in lawn and garden watering, plant irrigation, drip irrigation, hydroponics etc.

The package includes the OpenSprinkler controller (8 zones) with screw terminal blocks. The optional add-ons include 24VAC sprinkler transformer, WiFi adapter, and zone expansion boards (each adds 16 zones).



Hardware Interface

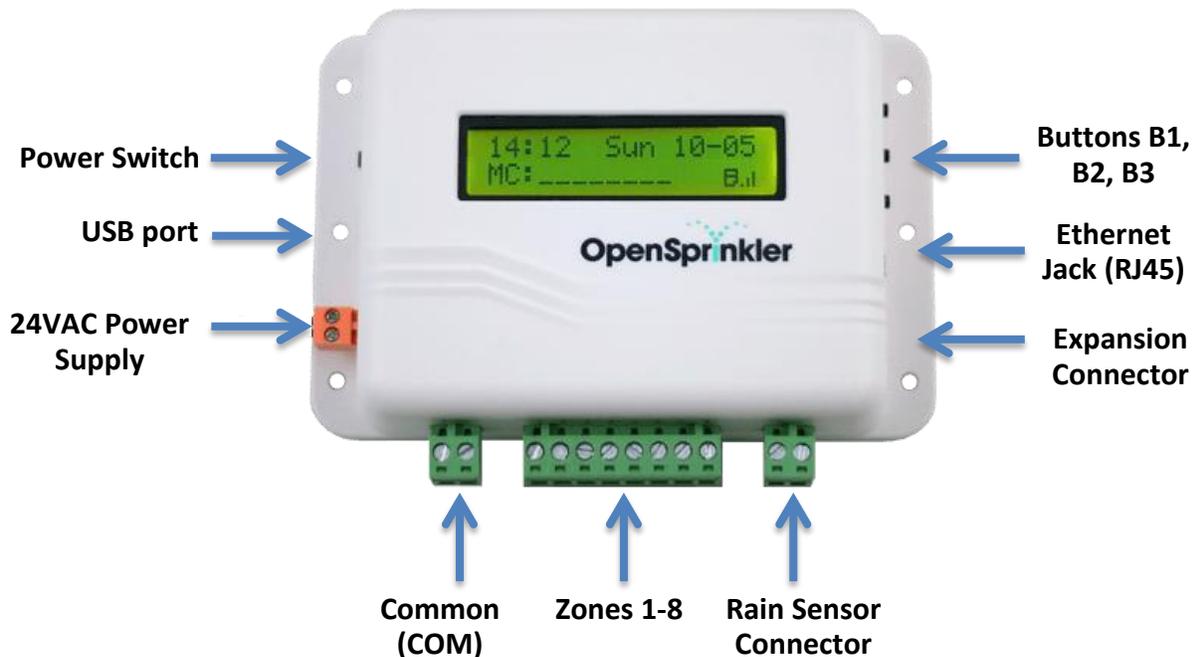

Installation

Important Notes

- OpenSprinkler is **NOT waterproof**. For outdoor use, please use a waterproof enclosure.
- **International customers:** please use a **24V AC** transformer compatible with your country's powerline voltage standard. Failure to observe the powerline voltage standard can result in damage to your controller and sprinkler valves.

Watch Installation Tutorial Video 



Instructions

Step 1: Label wires and remove your existing sprinkler controller.

- Carefully label and remove the wires from your existing sprinkler controller, then remove it from the wall. Typically you will see the **24V AC power supply wires**, the **COM (common) wire**, one or more **Zone wires**. Depending on your setup, you may also find a **Master Zone** (or Pump Start Relay) wire, and **Rain Sensor wires** (if you have a rain sensor installed).

Step 2: Attach OpenSprinkler to the wall, and re-insert the wires:


- Refer to the **Hardware Interface** diagram above. All terminal blocks on OpenSprinkler can be unplugged for easy wiring. To unplug, firmly grab both ends of the terminal block and pull it out.
- Insert the **24V AC wires** into the **orange** terminal (AC has no polarity so the two wires have no distinction), and the other wires into the corresponding terminals on OpenSprinkler. The COM terminal has two ports: you can use either of them.
- If you have a **Master Zone** (or Pump Start Relay) wire, insert it to any of the 8 zone ports – OpenSprinkler uses software-defined Master Zone, any of the first 8 zones can be assigned as a Master Zone.
- Tighten the screws on the terminal blocks.

Step 3: Attach an Ethernet cable to the Ethernet (RJ45) jack:

- Plug the other end of the Ethernet cable to an available port on your router.
- Alternatively, when using powerline or WiFi adapter, insert the other end of the cable to the adapter. For details, refer to the [Wireless Connection](#) section below.

Step 4: Link OpenSprinkler Zone Expansion Boards (optional):

- Plug one end of the zone extension cable (comes with expansion boards) into OpenSprinkler's **Expansion connector**: the connector is polarized so there is only one way to plug it in. Plug the other end to the Zone Expansion Board's **IN** connector.
- If you have more than one expansion boards, you can daisy chain them by following the **OUT**  **IN** links.

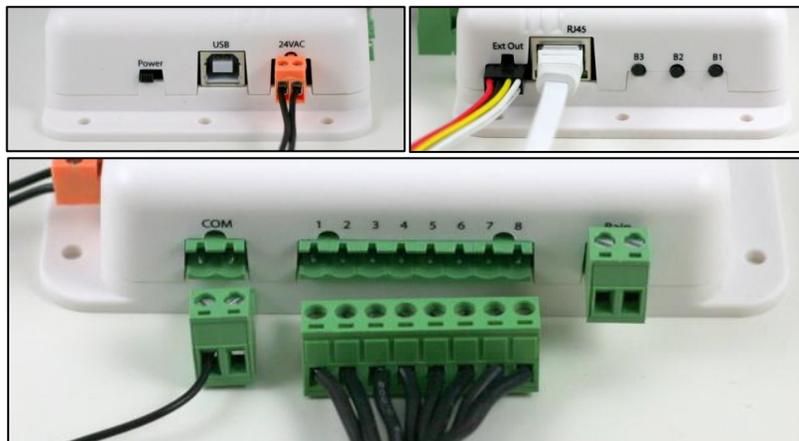

Wireless Connection

If there is no available Ethernet cable between OpenSprinkler and your router, use either of the following wireless options:

Option 1: Powerline Network Adapter

- This option is the easiest as no software configuration is required. Recommended part: [TP-LINK TL-PA2010](#).

Option 2: Pocket-Size WiFi Router


- This option requires some software configuration. Recommended part: [TP-LINK TL-WR702N](#).

Watch Wireless Connection Tutorial Video



LCD and Button Functions

LCD

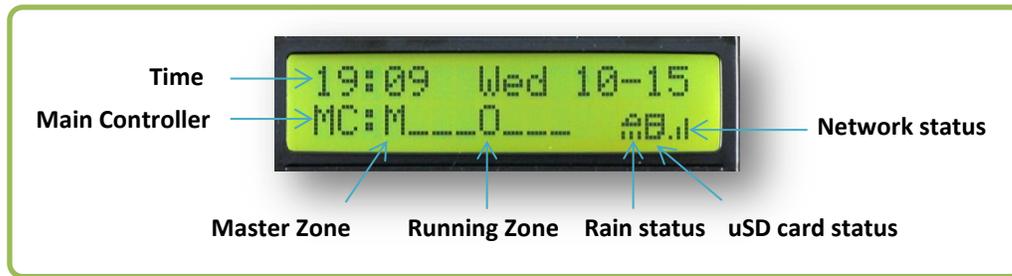

- The master zone (if defined) is marked by **M**.
- Each running zone is displayed with a three-letter animation: **. o O**
- The rain icon is displayed if rain is detected (through rain sensor), or a manual rain delay time is in effect.
- The microSD card icon is displayed when the controller detects microSD card.

Buttons:

Once the controller is powered on, the buttons are assigned the following functions:

	<i>Click</i>	<i>Press and Hold</i>
B1:	Display OpenSprinkler's IP address	Stop all zones immediately
B2:	Display gateway's (i.e. router's) IP address	Restart the controller
B3:	Toggle between the main controller (MC) and each expansion board (E1, E2, etc).	Manually start an existing program or a test program.

Before the controller is powered on:

- If **B1** is pressed while turning on the controller: enter **Reset All Settings** (factory default).
- If **B2** is pressed while turning on the controller: enter **Bootloader** (hardware v2.1 only, for firmware update).
- If **B3** is pressed while turning on the controller: enter **Setup Options**.

Note: in the following the terms 'zone' and 'station' are used interchangeably without distinction.

Firmware 2.1.0 User Manual

1. Overview

OpenSprinkler's built-in web interface works with both desktop and mobile browsers. It allows you to change settings and modify programs at any time using **either a standard web browser or the free OpenSprinkler mobile app**. To install the mobile app, just search *opensprinkler* in your app store.

Supported devices and browsers:

- **Desktop** browsers / apps: Google Chrome, Firefox, IE 9+, Apple OSX app, Google Chrome app
- **Mobile** browsers / apps: Apple iOS, Google Android, Amazon Kindle, Windows Mobile, Blackberry.

Watch Firmware 2.1.0 Tutorial Video




2. Access the controller

Once the controller is powered on and establishes a valid connection, you can find out its IP address and HTTP port number on the LCD by clicking button B1. In the following we will refer to the IP address as **os-ip** (e.g. 192.168.1.122).


Next, open a browser and type in the URL <http://os-ip> (e.g. <http://192.168.1.122>). In case you have set a custom HTTP port number (other than the default 80), include the port number in the URL as well. For example, if you have changed OpenSprinkler's port number to 8080, type in <http://os-ip:8080>.

Device Password: the factory default password is **opendoor**. For security reasons, please change the password upon first use.

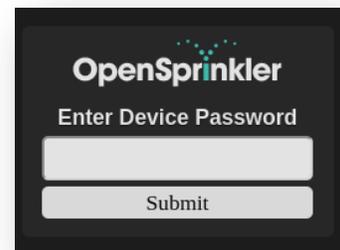

Tip: the OpenSprinkler mobile app has an additional feature that **automatically scans** your local network for available OpenSprinkler devices.

3. Homepage

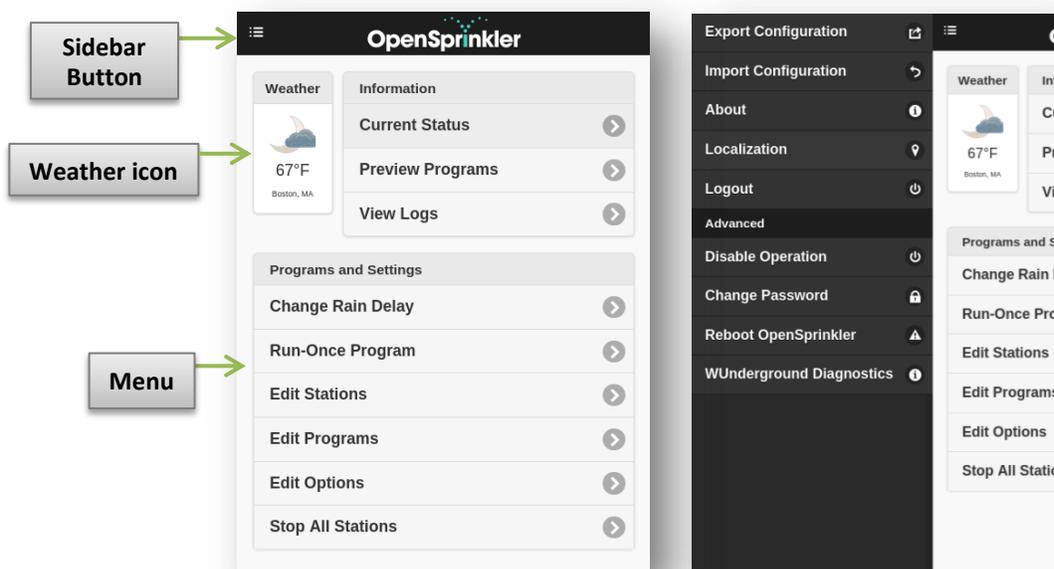


At the homepage you will find a weather icon and list of menu items. The button on the upper-left corner brings out the sidebar, which shows additional menu items such as:

- **Export/Import Configuration:** save/restore programs and settings. This is useful for firmware upgrade.
- **About:** display the app version, firmware version, and the language localization website.
- **Localization:** change display language (currently supporting 17 languages). Please check the **About** page to see how you can contribute to additional languages.
- **Disable Operation:** disables zone operations. This is useful if OpenSprinkler will not be used for an extended period of time.
- **WUderground Diagnostics:** display weather data (requires a valid Wunderground API key).

Tip: at any time, you can **activate the sidebar** by dragging your mouse pointer from left to right (on desktop browsers) or swiping your finger from left to right (on mobile browsers).

4. Edit Options

At the homepage, click **Edit Options** to configure the basic settings. See below for explanations of each option.

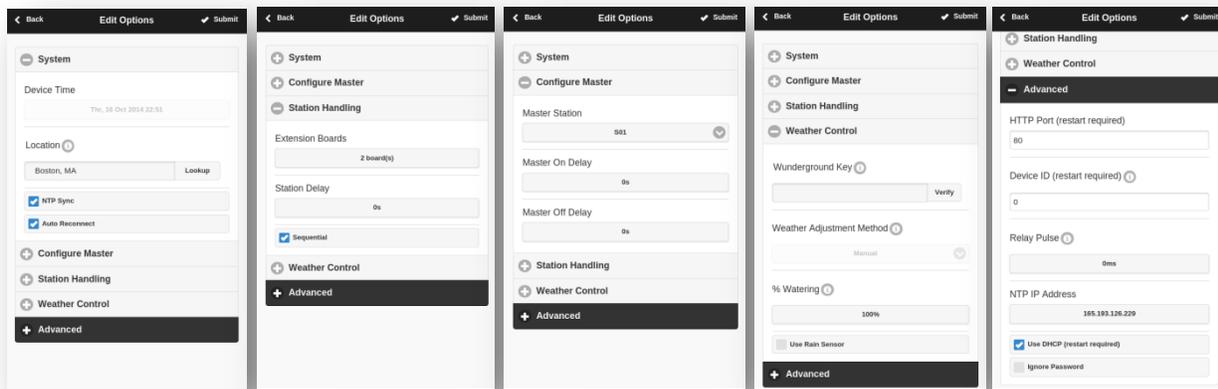

System Settings

- **Location:** this can be any of the following:
 - US zip code (e.g. 95050)
 - US city name followed by state name (e.g. Santa Clara, California)
 - International city name followed by country name (e.g. Sydney, Australia)
 - Wunderground PWS ID (e.g. pws:KMAAMHER2, for details please check the [Wunderground website](#)).

The location is used to automatically detect your time zone, DST (Daylight saving Time) setting, and obtain weather data online. It's recommended that you click on the **Lookup** button to verify the location and resolve ambiguity if any.

- **NTP Sync:** automatic time sync based on your location. When off, you can set the device time manually. Default is on.
- **Auto Reconnect:** automatically reconnect to the router if connection is lost. Default is on.

Configure Master

- **Master Station:** define a master station/zone, also known as pump station. Master is a station that turns on together with other stations. Any station from 1 to 8 can be set as a master. Default is none (i.e. not using master station).
- **Master On Delay:** fine tune the exact time at which the master turns on. The acceptable range is 0 to 60 seconds. For example, when set to 15, the master station will turn on 15 seconds after a station opens. Default is 0.
- **Master Off Delay:** fine tune the exact time at which the master turns off. The acceptable range is -60 to 60 seconds. For example, when set to -15, the master station will turn off 15 seconds before a station closes. Default is 0.

Station Handling

- **Expansion Boards:** number of zone expansion boards. For backward compatibility, the firmware assumes each expansion board has 8 stations. Thus when using a 16-station expansion board, each counts as 2 in the firmware. OpenSprinkler can automatically detect the number of expansion boards. Default is 0.
- **Station Delay:** the delay time between two consecutive stations. The acceptable range is 0 to 60 minutes. For example, when set to 1 minute, the second station will open 1 minute after the first station closes. Default is 0 (i.e. the second station will run immediately after the first station). This option is only applicable in sequential mode.
- **Sequential:** set the station running mode. When on, stations will run in sequence, one after another. When off, stations are allowed to run in parallel (i.e. simultaneously). Default is on.

Weather Control

- **Wunderground Key:** weather API key. This is required for automatic weather-based water time adjustment. Click on the information icon (i) for instructions. Please use the **Verify** button to check if the key is correct.
- **Weather Adjustment Method:** select weather-based adjustment method. If **Manual** method is selected, the % *Watering* is set manually. Otherwise the % *Watering* is set automatically by the selected method.
- **% Watering:** global scaling factor (from 0% to 250%) applied to station water times. For example, if set to 150%, all station water times will be multiplied by 150% (except in programs that do not use weather adjustment). Default is 100%.
- **Use Rain Sensor:** when using a rain sensor, the controller will automatically stop stations from running if rain is detected (except for stations that are set to ignore rain). You can additionally select the **sensor type:** *normally open* or *normally closed*. A rain sensor is essentially a rain-activated switch. Typical sensors are normally closed switches; when rain is detected, the switch opens. *Normally open* sensors are the reverse.


Advanced Settings

- **HTTP Port:** customize the device's HTTP port. Default is 80.
- **Device ID:** when using multiple OpenSprinklers on the same network, please set a unique Device ID for each. Default is 0.
- **Relay Pulse:** OpenSprinkler has a built-in relay useful for switching landscape lights, garage door openers, or other general-purpose devices. Relay pulse time controls the way relay is activated. When set to 0, the relay will remain open as long as an associated station is open. Otherwise, the relay will pulse on when a station opens or closes. This can be used to simulate momentary button presses, such as interfacing with garage door openers. Default is 0.
- **NTP IP Address:** set a custom NTP time sync server.
- **Use DHCP:** when on, OpenSprinkler's IP is dynamically assigned by the router. When off, the IP is statically assigned, in which case you will need to manually set a **Static IP address** and the **Gateway IP address** (i.e. your router's IP). Default is on.
Note: instead of turning off DHCP, it's highly recommended that you use the router's DHCP reservation, or Bind IP to Mac feature to manage static IP assignment.

5. Edit Stations

At the homepage, click **Edit Stations** to configure station/zone settings. Give each station a **custom name** (up to 16 characters), **test or stop a station**, and set the following station attributes:

- **Use Master:** when checked, the Master will turn on whenever this station opens. This attribute is only visible if a Master Station has been defined. Default is on.
- **Ignore Rain:** when checked, this station will bypass rain delay and rain sensor settings. This is useful for zones not to be affected by rain. Default if off.
- **Activate Relay:** when checked, this station will activate relay. Default is off.
- **Disable:** when checked, this station will not run and is hidden from the user interface.

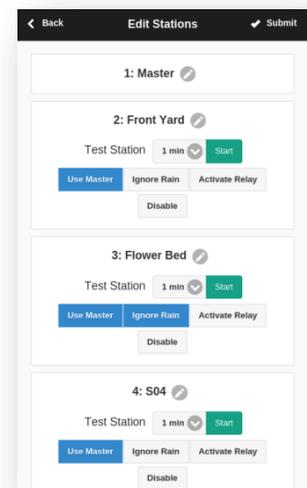


6. Run-Once Program

To manually start a one-off program, go to the homepage, click **Run-Once Program**. You can load preset water times from any of the existing programs, or a test program (1 minute each station). You can also manually edit the water time for each station.

- A water time of 0 value means the stations will not run.
- If the controller is already running an existing program, that program will be terminated immediately.
- Station attributes are observed, such as *Use Master Station*, *Activate Relay*.
- Controller settings, such as *Sequential Mode*, *Station Delay Time*, *Master On / Off Time*, are observed.



However:

- **Rain Delay and Rain Sensor settings are ignored.**
- **% Watering Adjustment is ignored.**

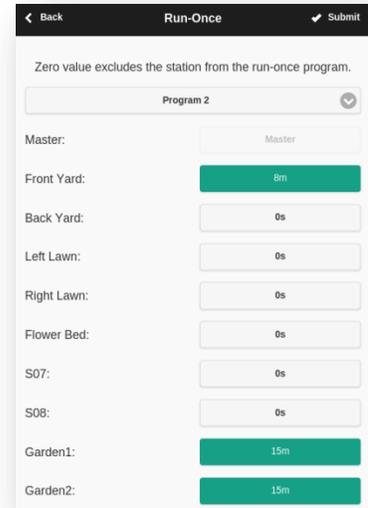


7. Current Status, Stop Stations, and Set Rain Delay

At the top of the homepage is a status bar that displays the current running program/station, and rain delay/rain sensor status.

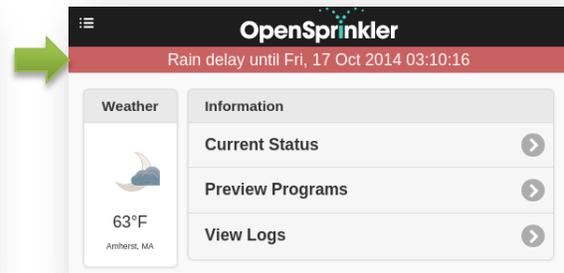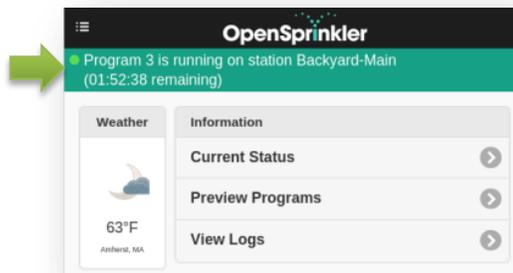

- At the homepage, click **Current Status** to see the status of all stations, including stations that are running and those in the queue waiting to run. You can also check the total remaining time of the running program.
- At the homepage, click **Stop All Stations** to stop all stations immediately, including those in the queue waiting to run.
- To stop an individual station, go to the homepage, and click **Edit Stations**, then click on the **Stop** button next to a station.
- To manually set a rain delay time, go to the homepage, and click **Change Rain Delay** to set a custom rain delay time (in hours). The controller will immediately stop all stations, and programs will not run until the rain delay time is over. An input value of 0 cancels the rain delay.

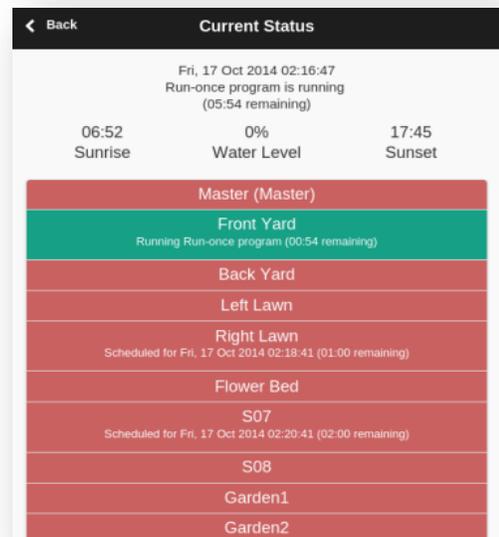

8. Programs

At the homepage, click **Edit Programs** to see the list of existing programs. Here you can:

- **Create** a program by either adding a new program or copying an existing program.
- **Modify** or **Delete** an existing program.
- **Re-order** existing programs by using the arrow keys.

This firmware supports up to **14** programs.

Program Data

Click on the **+ Add** button at the upper-right corner to create a new program. Each program contains the following data:

Basic Settings

- **Program Name:** a custom program name, up to 12 characters.
- **Enable:** program enable flag. Default is enabled.
- **Use Weather Adjustment:** when checked, the % *Watering* applies to all station water times in this program. Default is on.
- **Start Time:** the first start time of the program (e.g. 8:00 AM).

Program Type

- **Weekday:** program will run on the selected weekdays.
- **Interval Day:** program will run every N days, where N is between 2 to 128. You will also need to set the **Starting in** days. For example, a program that repeats every 5 days starting in 0 day will run today, and every 5th day from today. A program that repeats every 3 days starting in 1 day will run tomorrow, and every 3 days from then.
- **Restrictions:** odd/even day restrictions. **Odd** day means the program will run only if it's an odd day of the month (except the 31st, or Feb 29th). Similarly for even days. Default is no restrictions.

Station Water Times



- Set the water time for each station. A value of 0 means the station will not run. The range / resolution of water time is as follows:
 - 0 to 59 seconds, in steps of seconds.
 - 1 to 179 minutes, in steps of minutes.
 - 3 to 18 hours, in steps of hours.

Additional Start Times

There are two choices of additional start times:

- **Fixed:** up to 3 given additional start times. Any time of a day.
- **Repeating:** regularly repeating start times. For example, repeat every one and half hours for six times. This is useful for breaking down long water times into shorter cycles.

Note: additional start times that go over to the next day will be ignored.

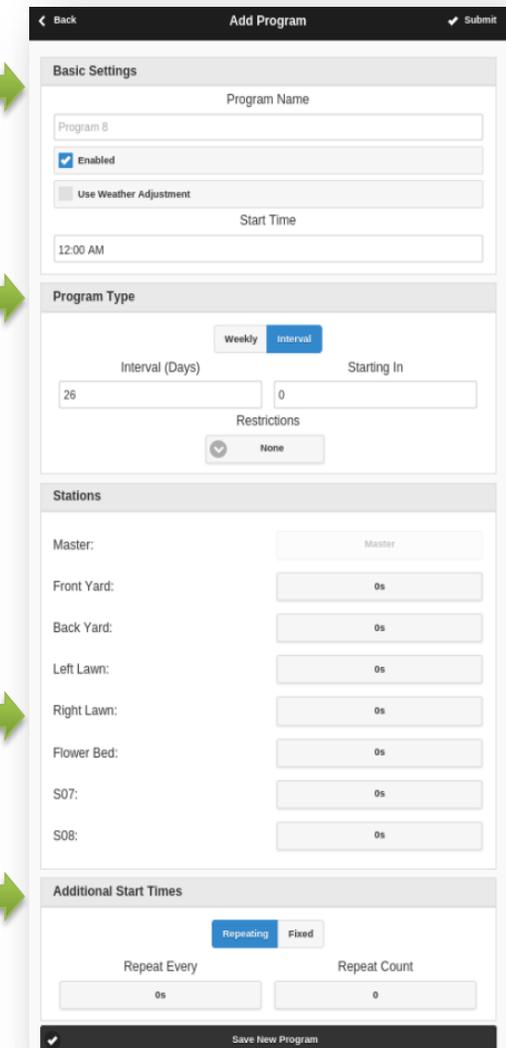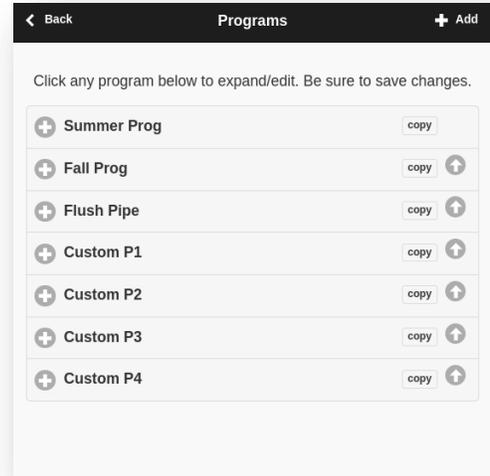

8.1 Program Preview

To verify that all programs are set correctly, go to the homepage and click **Preview Programs** to visualize how the programs are scheduled to run each day.

- **Today's schedule** is shown by default. Click on the left and right arrows at the top to change to a different day.
- **Current time** is indicated by the pink line. You can zoom in/out or drag the plot left/right to check the schedule in details.
- **Colored bars** show the program name and time span of each station run. Clicking on each bar directs you to the specific program editing page.

The program preview is implemented using a software simulation of the scheduling algorithm:

- What you see accurately reflects how the programs are scheduled to run.
- All controller settings, such as *Sequential Mode*, *Station Delay Time*, *Master On / Off Time*, are observed; and all station attributes such as *Use Master Station*, *Activate Relay* are observed.



Notes:

- **Rain Delay and Rain Sensor are ignored** because these dynamic events cannot be predicted therefore cannot be previewed.
- Programs that are set to **Use Weather Adjustment** will be scaled by the current **% Watering** parameter.
 - When using **Manual Adjustment** method, the same **% Watering** is applied to every day.
 - When using the **Zimmermand Adjustment** method, the current **% Watering** (dynamically calculated on a day to day basis) is only applied on today's schedule, while 100% is applied to all other days.

8.2 Sequential vs. Parallel Running Modes

OpenSprinkler supports **running stations either in sequence (one after another) or parallel (concurrently)**. By default *Sequential Mode* is on, which is the most common way. In this mode, stations that overlap in time will be automatically serialized. This helps conserve water pressure by ensuring only one station is open at a time. For example, if station B is scheduled to open while station A is still running, it will be automatically pushed after station A.

By turning off *Sequential Mode*, the controller will open a station whenever it's scheduled to run, therefore allowing multiple stations to run simultaneously. Either way, the program preview correctly accounts for the *Sequential Mode* setting.

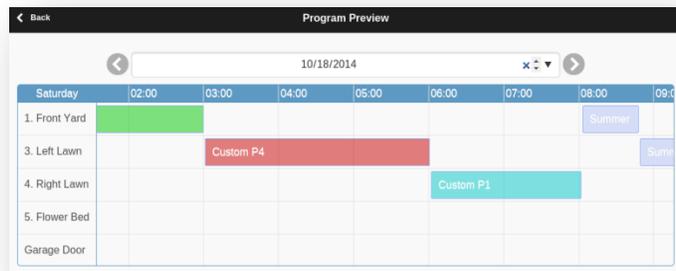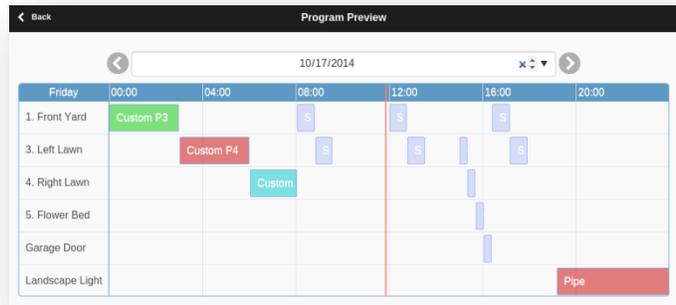


9. Logging

OpenSprinkler supports logging by using a microSD card. It logs station runs as well as rain delay and rain sensor status.

Note: unless noted otherwise, the controller does **NOT** come with microSD card built-in. In order to use logging, please refer to the [Advanced Topics](#) section for instructions on how to install a microSD card.

At the homepage, click **View Logs** to see a graphical plot of the logging data.

- In the **Options** tab, select the start and end dates of the query. The default is the past 7 days.
- Several **Grouping** methods are provided: *None, Hour, DOW, or Month*.
- Select **Table** at the top of the page to switch to a table view of the data.

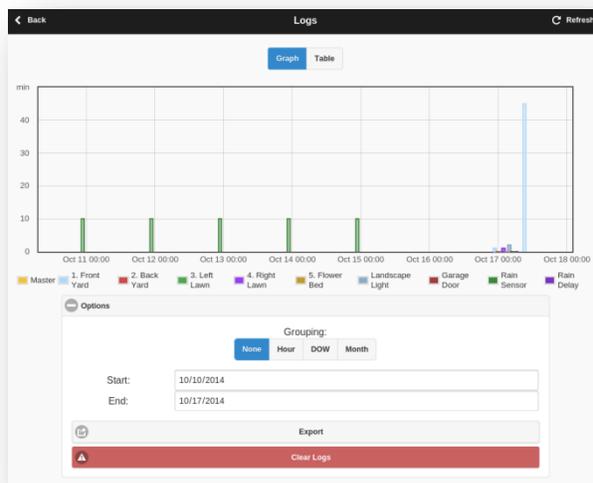

Runtime	Time	Station
28s	02:10:45	Rain Delay
5s	02:15:07	1. Front Yard
5s	02:15:07	2. Back Yard
5s	02:15:07	3. Left Lawn
5s	02:15:07	4. Right Lawn
5s	02:15:07	5. Flower Bed
5s	02:15:07	Landscape Light
5s	02:15:07	Garage Door
5s	02:15:07	Rain Sensor
57s	02:16:32	1. Front Yard
57s	02:16:32	4. Right Lawn
57s	02:16:32	Landscape Light
1m	02:17:41	1. Front Yard
1m	02:19:41	4. Right Lawn
2m	02:22:41	Landscape Light
1m	02:28:25	1. Front Yard
1m	02:30:25	4. Right Lawn
2m	02:33:25	Landscape Light
45m	12:45:01	1. Front Yard

Firmware Upgrade

Warning: uploading a new firmware will **ERASE** your existing programs and settings. If you don't want to lose the settings, please use the web interface's **Export Configuration** to save a backup copy and import them later.

To upgrade the OpenSprinkler firmware, you need a regular size USB cable, and the firmware updater program. Follow the instructions below or watch the Firmware Update Tutorial Video.

- [Download OpenSprinkler Firmware Updater v2.0 \(zip\)](#)
- [Instructions \(PDF\)](#)

Watch Firmware Upgrade Tutorial Video



Advanced Topics (technical skills required)

Note: to open the device enclosure, just untighten the four screws at the back of the device.

1. Installing a microSD Card

- OpenSprinkler supports microSD card of any capacity, formatted to either **FAT16** or **FAT32**. The microSD card is used for storing logging data, and can also be used to serve the web interface's Javascript files.
- Open the enclosure, and locate the microSD card slot close to the top edge of the circuit board, partially under the LCD. Insert the microSD card, until you hear a clicking sound. Then assemble the circuit board back to the enclosure.
- If the card is correctly installed, upon power-on you should see a microSD card icon on the LCD screen: 
- The firmware automatically configures the card for storing logging data.

2. Using the on-board Mini-Relay

Warning: the step below requires soldering to the circuit board. **THIS WILL VOID THE PRODUCT WARRANTY!**

OpenSprinkler has an on-board mini relay rated at 120VAC/2A. It can be used for switching general-purpose devices, such as **low-voltage (12V to 36V) landscape light bulbs, garage door openers**, etc.

Proceed with care and use your own discretion.

- The three relay pins are mapped out on the circuit board: **CO** (change-over), **NO** (normally-open), **NC** (normally closed).
- Solder wires to the mapped out pins. Drill holes on the enclosure as you need, so that the wires can go through.
- Although rated at 120VAC, **please DO NOT run voltages higher than 40V**, due to the limited PCB trace size.
- Any OpenSprinkler station can be set to activate the relay. The activation method depends on the **Relay Pulse** parameter:
 - A value of 0 means the relay remains on as long as the station is open. This is useful for switching landscape lights.
 - Otherwise the relay will pulse on when opening or closing a station. This can simulate momentary button clicks, useful for interfacing with garage door openers.

3. Installing a Radio Frequency (RF) Transmitter

Warning: the step below requires soldering to the circuit board. **THIS WILL VOID THE PRODUCT WARRANTY!**

OpenSprinkler has on-board pins that match a standard 434MHz or 315MHz Radio Frequency (RF) transmitter. This can be used to send signals to remote power sockets for switching powerline devices, such as heaters, fans, pumps.

Proceed with care and use your own discretion.

- Locate the RF pinouts: **A3, VIN, GND**. Solder the RF transmitter to the matching pins: **DATA->A3, VIN->VIN, GND->GND**.
- Carefully assemble the circuit back to the enclosure.
- The OpenSprinkler firmware can be modified to support an RF transmitter. For details, [please check this demo](#).



Frequently Asked Questions (FAQ)

- **How many zones does OpenSprinkler support?**

The main controller supports 8 zones. Each expansion board adds 16 zones. Firmware 2.1.0 supports a maximum of 48 zones.

- **How many programs does it support? What about program schedule dates and start times?**

Firmware 2.1.0 supports up to 14 programs. Each program allows: 1) an individual water time for every station; 2) either weekday schedule or interval day schedule; 3) optional odd/even day flags; 4) two types of start times: either up to 4 given start times, or repeating start times (e.g. start at 8:30am, repeat every 45 minutes for 8 times).

- **Does OpenSprinkler have built-in wireless?**

OpenSprinkler currently only supports wired Ethernet connection. However, wireless is possible by using a pocket size WiFi adapter (optional add-on) or alternatively powerline network adapters. Please refer to the [Wireless Connection](#) section.

- **How do I check the IP address assigned to OpenSprinkler?**

Click button B1, and the IP address will be displayed onto the LCD screen.

- **What types of sprinkler valves does it work with?**

OpenSprinkler works with standard **24V AC sprinkler valves**. If you are not sure what type of valves you have, use a multi-meter to measure the resistance on the two wires of the valve: the resistance should be between 22 to 50 ohm. If it's very low (3 to 10 ohm), that means your valve is probably of DC latching type, which is not compatible with OpenSprinkler.

- **I am new to sprinkler system setup. How do I wire sprinkler valves?**

Each sprinkler valve has two wires. Connect one wire to the COM terminal, and the other wire to a zone port (1 to 8). For multiple valves, one wire from each valve is combined together and goes to the COM terminal; the other wire goes to an individual zone port. If you are not sure, ask a landscaper or go to a home improvement store for help.

- **How do I connect a Master Zone or Pump Station?**

If you have a **Master Zone** or **Pump Start Relay**, insert that wire to any of the 8 ports. OpenSprinkler uses software-defined Master Zone, and any of the first 8 zones on OpenSprinkler can be assigned as a Master Zone.

- **What's the maximum distance allowed between the controller and the valves?**

This depends on the wire gauge (AWG). In general, you can run up to 700 ft (200 m) with 20 AWG wires, 1000 ft (300 m) with 18 AWG wires, and 1500 ft (150 m) with 16 AWG wires. Thicker wires allow longer distances.

- **What's the maximum distance allowed between the main controller and expansion boards?**

Again, this depends on the wire gauge (AWG) of the extension cable. The default cable shipped with expansion boards is a 24 AWG 15-inch long cable. You can extend the length by using a custom cable with thicker wires.

- **Can I insert two zone wires to the same terminal port?**

Yes. But keep in mind that if you do this the two zones will always open or close at the same time.

- **Can I connect sprinkler valves to a garden hose?**

Sure. Most sprinkler valves use NPT (National Pipe Thread) standard, while garden hoses use GHT (Garden Hose Thread) standard. So you need a 'NPT to GHT adapter', which you can find either online or at home improvement stores.

- **What happens if power is lost?**

OpenSprinkler stores all programs and settings in non-volatile memory. So the data is preserved during power outage.

- **Can OpenSprinkler run offline without web connection?**

Once programmed, OpenSprinkler can run offline without network connection at all. The controller has built-in real-time clock and battery for time keeping. You can also manually start an existing or test program on the controller by using buttons.

- **How do I start a program manually on the controller using buttons?**

Press and hold button B3 until you see the **Start a Program** message. Then follow the instructions on the LCD screen.

- **Does OpenSprinkler support flow sensor and soil moisture sensor?**

Not yet. Development is under way to integrate these sensors. As OpenSprinkler is open-source, you can modify the software to integrate these sensors on your own, and you can even use additional sensors such as water level sensor, motion sensor. If you are not familiar with programming, this provides a great motivation to start learning to program.

- **How do I set a static IP address?**

The recommended way to set static IP address is by using your router's **DHCP Reservation** or **Bind IP to MAC** feature. Alternatively, you can set a static IP address on OpenSprinkler by turning off OpenSprinkler's DHCP option, then manually set a static IP and the gateway (i.e. router) IP.

- **How do I access OpenSprinkler remotely, such as from office or when I am traveling away?**

You can access OpenSprinkler remotely by using the **Port Forwarding** feature that's available on most routers. To do so, you need to log on to your router's configuration page → **Port Forwarding** section, then set up an entry that maps an external request to OpenSprinkler's IP address and port number. Tutorial videos can be found in the Support page. Once set up, you'll be able to access OpenSprinkler remotely, by using your router's external IP address. You can find out your external IP address from your router's status page, or simply open a browser and search 'what's my ip'.

- **How do I restore settings to factory default?**

Turn off OpenSprinkler. Then **press and hold button B1 while turning it back on**, until you see the message **Reset All Settings?**. Click button B1 to select **Yes**, then press and hold button B3 until the controller restarts and finishes resetting.

- **Can I develop my own app, or use my own scripts to interface with OpenSprinkler?**

Absolutely. Please refer to the OpenSprinkler Support page for API documentation.

- **How can I help OpenSprinkler to support more languages?**

OpenSprinkler's language localization feature is crowd-sourced so anyone can help. Go to the **Web Interface -> Sidebar -> About** page, click on the link to the localization website.

- **How does OpenSprinkler's weather-based adjustment work?**

The weather-based adjustment first uses your location to query Wunderground.com for real-time weather data (available world-wide). It then calculates a % **Watering** value which is applied to all station water times. The percentage value is calculated based on your local temperature, humidity, and precipitation (rainfall), and varies between 0% to 250%. The value is updated every 15 minutes. For example, low temperature, high humidity, and/or considerable rainfall all lead to reduced watering, thus saving water usage.

- **What license is OpenSprinkler published under?**

All content, including hardware and software, are published under [Creative Commons Attribution-ShareAlike 3.0](#) license. The product is open-source for educational purpose and to promote technology innovations.

Specifications

- **Input Voltage:** 22V AC to 28V AC.
- **Power Consumption:** 1 to 1.5 Watt
- **Output Current:** 450mA @ 5V (to power external USB devices)
- **Number of Zones:** 8 on the main controller, extendable to 48 with zone expansion boards
- **AC Output Current:** 800mA continues @ 24V AC per zone; 8A inrush current
- **Over-voltage Protection:** 48V bi-directional TVS on each zone, AC input, and rain sensor terminal
- **Over-current Protection:** 2A on AC input; 1A on 5V DC.
- **Product Size:** 135mm x 100mm x 32mm (5.3" x 4" x 1.26")
- **Product Weight:** 200g (7oz)

Links and Resources

- [OpenSprinkler Homepage](#)
- [OpenSprinkler Support page](#)
- [OpenSprinkler Github repository](#)

